

KYNAR® / KYNAR FLEX®

POLYVINYLIDENE FLUORIDE

Superior Permeation Barriers



The overall success of a containment material is dependent on a combination of important properties:

- The material must maintain its physical properties over time, e.g., resist stiffening or cracking
- The material must resist swelling and weight gain
- The material must not dissolve or soften
- The material must not abrade away or particulate from chemical flow
- The material must not allow permeation through the containment barrier

Permeation through Kynar® PVDF polymers

Permeation is influenced by the phase of the matter being contained. Gas phases tend to be more permeable than liquid phases. For Kynar® PVDF as a containment barrier, permeation of gases or liquids is influenced by:

The thickness of the polymer barrier layer:

Permeation is generally given in rates per thousandth of an inch (mils) or millimeters (mm) of barrier thickness. Regardless of the permeation resistance of the polymer, thicker barriers tend to provide lower permeation rates.

Surface effects of the polymer: Materials with a fluorinated surface, like Kynar PVDF, increase the contact angle of many fluids and thus have lower permeation rates through the polymer.

Crystallinity of the polymer: The crystallinity of a polymer can have a measurable effect on permeation values. Note that crystallinity varies for Kynar® and Kynar Flex® polymers.

Concentration: Chemicals in solution can sometimes be pulled through the barrier by the solvent. A smaller solvent molecule will sometimes swell the polymer and allow a larger molecule to pass through. High concentrations of small molecules have greater permeation rates than low concentrations of large molecules.

Temperature: Permeation rates increase with temperature. For any barrier, the permeation rate at the highest anticipated temperature should determine the design of the barrier system.

Pressure: Higher pressures within the containment vessel will increase permeation rates through the polymer barrier.

Polarity: Along with molecular size, molecular polarity plays a key role in permeation through polymer barriers. Kynar PVDF is somewhat polar (~ 1.0–1.7) and will thus be quite resistant to benzene, Cl₂, Br₂, O₂, N₂, H₂, especially when compared with non-polar fluoropolymers (PTFE, PFA, FEP) and non-polar polyolefins (PE, PB, PP). The high crystallinity gives Kynar PVDF reasonably good resistance to even very polar chemicals like methanol and sulfuric acid.

Published data

Two definitive data tables have been published showing the permeation resistance of various polymers to specific gases and liquid:

Gas permeability of fluoropolymers*

Data based on 100 µm film thickness at 23°C. Method: ASTM D1434 for gases. Water vapor according to DIN 53122.

Various liquid permeation rates in corrosive chemicals

(Source Southwest Research Institute) (test 30mil tubes static 28 days/672 hours)


	PTFE	PFA	FEP	ETFE	CTFE	ECTFE	PVDF	PVF
Water Vapor g/m ² .d.bar	5	8	1	2	1	2	2	7
Air cm ³ /m ² .d.bar	2000	1150	600	175	x	40	7	50
Oxygen cm ³ /m ² .d.bar	1500	x	2900	350	60	100	20	12
Nitrogen cm ³ /m ² .d.bar	500	x	1200	120	10	40	30	1
Helium cm ³ /m ² .d.bar	3500	17000	18000	3700	x	3500	600	300
Carbon Dioxide cm ³ /m ² .d.bar	15000	7000	4700	1300	150	400	100	60

* Data published in 1980 Kunststoffe paper entitled Fluorocarbon Films—Present Situation and Future Outlook.
x = Not tested


Ambient Permeation Rates (g-cm/hr/m)						
	Chloroform	Methanol	Toluene	HCL	Hydrochloride	Bromine
Kynar Flex® 2800	<1x10 ⁻⁵	<1x10 ⁻⁵	<1x10 ⁻⁵	<1x10 ⁻⁵	<1x10 ⁻⁵	<1x10 ⁻⁵
Kynar Flex® 2850	<1x10 ⁻⁵	<1x10 ⁻⁵	0.00004	<1x10 ⁻⁵	<1x10 ⁻⁵	<1x10 ⁻⁵
Kynar® 740	<1x10 ⁻⁵	<1x10 ⁻⁵	<1x10 ⁻⁵	<1x10 ⁻⁵	<1x10 ⁻⁵	0.00026

66°C Permeation Rates (g-cm/hr/m)					
Kynar Flex® 2800	0.177716	0.16340	0.05972	0.01621	0.00347
Kynar Flex® 2850	0.09386	0.11966	0.03488	0.01226	0.00258
Kynar® 740	0.02142	0.00063	0.00966	0.02930	0.00170

Plastic permeation constants for the different tube types.

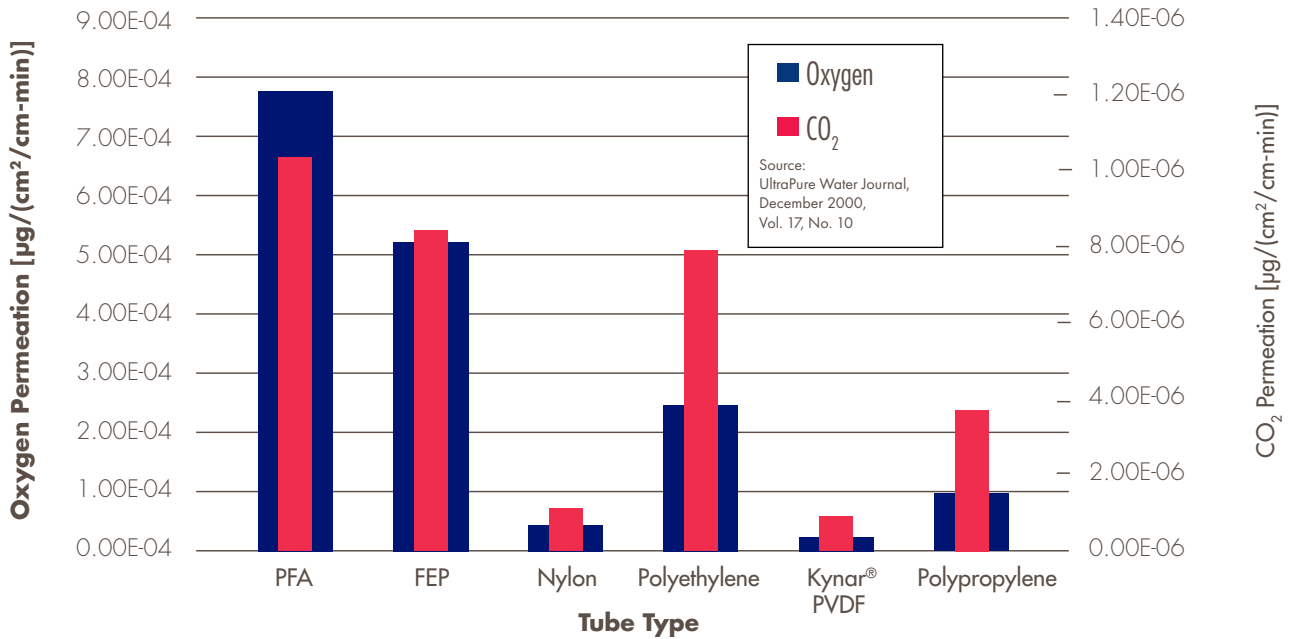

Oxygen permeation of the sample versus the flow rate for all of the tubing types

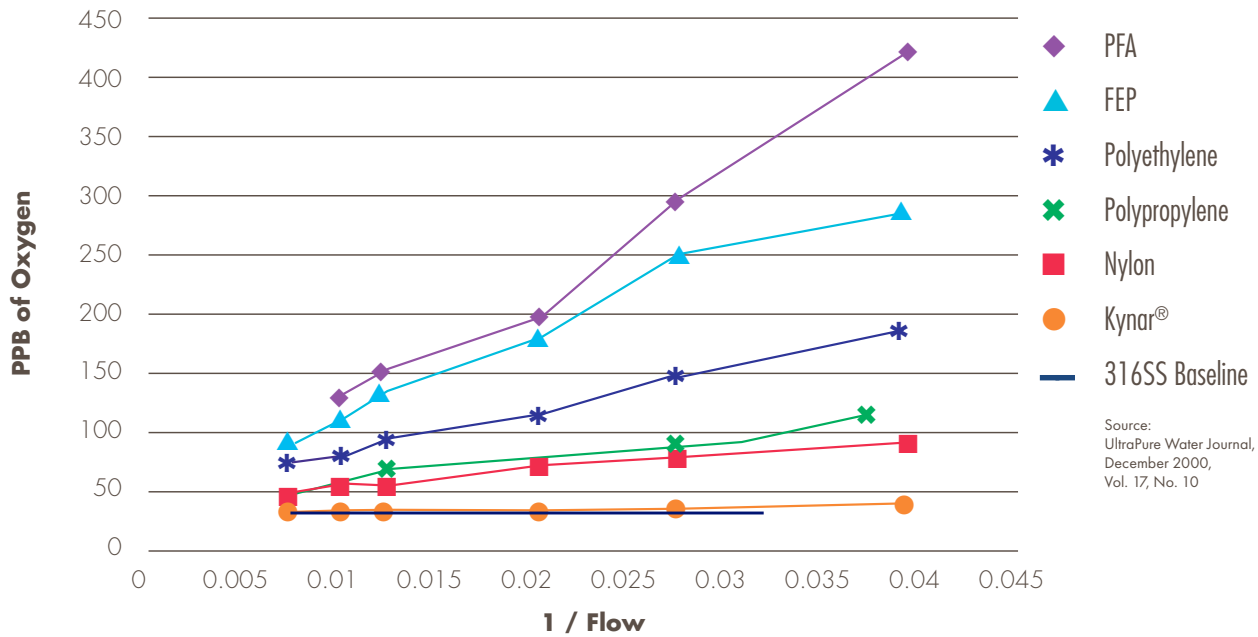

PERMEATION CONSTANTS

Plastic Type	Oxygen (O ₂)*	Carbon Dioxide (CO ₂)*	Water**
PFA	1.56E-8	1.42E-8	1.08E-7
FEP	1.08E-8	1.11E-8	7.08E-8
Polyethylene	5.07E-9	1.06E-9	8.92E-8
Polypropylene	1.96E-9	4.9E-9	2.45E-8
Nylon	8.25E-10	1.41E-9	2.16E-6
PVDF	1.84E-10	1.8E-10	2.24E-10

*from experimental data **estimated from literature by ratio of water-to oxygen rates
Source: UltraPure Water Journal, December 2000, Vol. 17, No. 10

PERMEATION RATES

Micrograms/min. through plastic sheet, 1 cm thick, with an area of cm²

Plastic Type	Oxygen (O ₂)*	Carbon Dioxide (CO ₂)*	Water**
PFA	7.81E-4	1.05E-6	2.58E-5
FEP	5.13E-4	8.23E-7	1.69E-5
Polyethylene	2.4E-4	7.83E-7	2.13E-5
Polypropylene	9.28E-5	3.64E-7	5.85E-6
Nylon	3.9E-5	1.05E-7	5.17E-4
PVDF	8.68E-6	8.39E-8	5.35E-8

*from experimental data **estimated from literature by ratio of water-to oxygen rates Note: 8.68E-6 means 8.68 * 10 to the -6th power
Source: UltraPure Water Journal, December 2000, Vol. 17, No. 10

Additional data for other gases and liquids are available on request. Please consult an Arkema Inc. representative for further details.

The statements, technical information and recommendations contained herein are believed to be accurate as of the date hereof. Since the conditions and methods of use of the product and of the information referred to herein are beyond our control, ARKEMA expressly disclaims any and all liability as to any results obtained or arising from any use of the product or reliance on such information; NO WARRANTY OF FITNESS FOR ANY PARTICULAR PURPOSE, WARRANTY OF MERCHANTABILITY OR ANY OTHER WARRANTY, EXPRESSED OR IMPLIED, IS MADE CONCERNING THE GOODS DESCRIBED OR THE INFORMATION PROVIDED HEREIN.

The information provided herein relates only to the specific product designated and may not be applicable when such product is used in combination with other materials or in any process. The user should thoroughly test any application before commercialization. Nothing contained herein constitutes a license to practice under any patent and it should not be construed as an inducement to infringe any patent and the user is advised to take appropriate steps to be sure that any proposed use of the product will not result in patent infringement. See SDS for Health & Safety Considerations. Arkema has implemented a Medical Policy regarding the use of Arkema products in Medical Devices applications that are in contact with the body or circulating bodily fluids: (<http://www.arkema.com/en/social-responsibility/responsible-product-management/medical-device-policy/index.html>).

Arkema has designated Medical grades to be used for such Medical Device applications. Products that have not been designated as Medical grades are not authorized by Arkema for use in Medical Device applications that are in contact with the body or circulating bodily fluids. In addition, Arkema strictly prohibits the use of any Arkema products in Medical Device applications that are implanted in the body or in contact with bodily fluids or tissues for greater than 30 days. The Arkema trademarks and the Arkema name shall not be used in conjunction with customers' medical devices, including without limitation, permanent or temporary implantable devices, and customers shall not represent to anyone else, that Arkema allows, endorses or permits the use of Arkema products in such medical devices. It is the sole responsibility of the manufacturer of the medical device to determine the suitability (including biocompatibility) of all raw materials, products and components, including any medical grade Arkema products, in order to ensure that the final end-use product is safe for its end use; performs or functions as intended; and complies with all applicable legal and regulatory requirements (FDA or other national drug agencies) It is the sole responsibility of the manufacturer of the medical device to conduct all necessary tests and inspections and to evaluate the medical device under actual end-use requirements and to adequately advise and warn purchasers, users, and/or learned intermediaries (such as physicians) of pertinent risks and fulfill any postmarket surveillance obligations. Any decision regarding the appropriateness of a particular Arkema material in a particular medical device should be based on the judgment of the manufacturer, seller, the competent authority, and the treating physician.
© 2018 Arkema Inc. All rights reserved.

Kynar® and KynarFlex® are registered trademarks of Arkema Inc.

extremematerials.com
kynar.com

Contact Information

China: +86 21 61476888
Japan: +81 3 5251 9900
Korea: +82 2 37036700
Singapore: +65 64199199
Taiwan: +886 2 27476979
India: +91 22 66137500

Arkema Inc.

900 First Avenue
King of Prussia, PA 19406
USA
Tel.: (+1) 610-205-7000

Headquarters: Arkema France

420, rue d'Estienne d'Orves
92705 Colombes Cedex – France
Tel.: +33 (0)1 49 00 80 80
Fax: +33 (0)1 49 00 83 96
arkema.com

ARKEMA
INNOVATIVE CHEMISTRY